



**White Paper:**

**SmartCP Autosensing Side Inputs  
& USB Media AutoPlay  
Settings and Use**

**November 2009**

*Anthony Fonzo  
Senior Product Marketing Manager  
Philips Hospitality Americas*

## Contents

---

Contents .....	2
Applicability .....	2
What is SmartCP autosensing side inputs?.....	2
How do I set up USB Media AutoPlay? ...	2
How do I use USB Media AutoPlay?.....	3
SmartCP Autosensing Side Inputs & USB Media AutoPlay Cheat Sheet.....	5

## Applicability

---

Some of the features described in this document are applicable only to the 5561 and 5581 families of TVs. They are not available to the 5560 or 5860 (or previous) families of TVs.

## What is SmartCP autosensing side inputs?

---


Hotel guests increasingly bring their own content and look for hotels to provide easy and convenient ways to view or listen to that content. The SmartCP autosensing side inputs on a Philips television are guest-friendly, allowing guests to enjoy content from their own devices (mp3 players, personal game systems, and music and photos from a USB memory stick).

\* USB only. Manual menu selection on other inputs. Update for complete autosensing available first quarter 2010. When updated, a menu option will exist for Autosensing Side Inputs and it can be enabled or disabled exactly as USB Break-in is described below. When enabled, the television will automatically switch to the last side input the guest connects a signal to. For example, if the guest is looking at photos on the USB input and then connects an iPod to the composite side inputs, the television will switch to display the iPod at that point.


## How do I set up USB Media AutoPlay?

---

Using the setup remote, RC2573GR, with the side slider selector set to "Setup," press "M" to enter the setup menu. You will see a screen that looks like this:

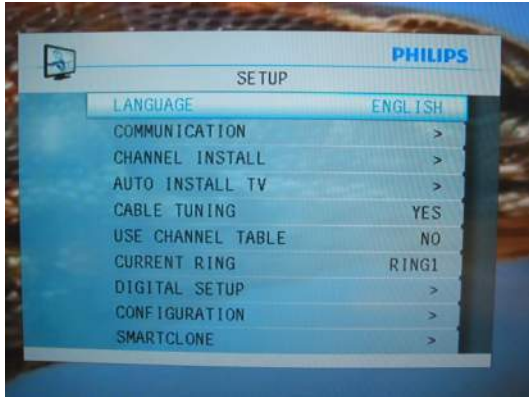

Navigate to Configuration (2<sup>nd</sup> from bottom), and then press the ► button to enter that sub-menu. Press the ▼ button 4 times to navigate to SmartFeatures, and then press the ► button to enter that sub-menu. Navigate to USB BREAK-IN, and press the ► button to toggle the value to “YES”.

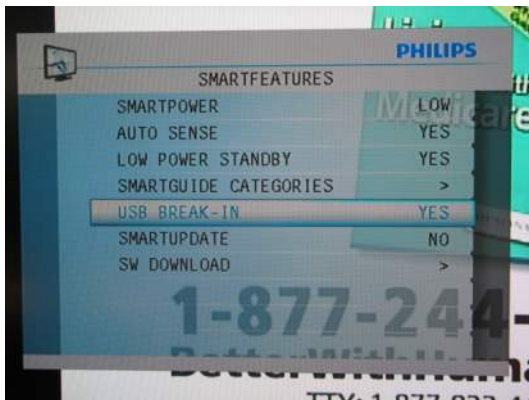

Back out of the menu system by pressing “M” to access the previous menu. The menu system is exited after the 3<sup>rd</sup> press of “M”.

### How do I use USB Media AutoPlay?

Once USB Break-In is set to YES, simply insert a USB stick containing media files into the USB port in the side jack panel.

After the TV recognizes the USB memory stick, a full size on screen

display appears, while audio from previous program is still heard.



Using a guest remote, RC2888, press the ► button to move the selection to the right, and it will highlight Picture. The menu shifts to the left, displays the contents of the root level on the right side, and the audio from the previous tuner program will no longer be heard.

To view pictures: To view pictures stored on the USB stick, press the ► button and the menu again shifts to the left. All folders and viewable picture files located at the root level will be listed on the left side. Press the ▼ button to navigate to a folder, and the list of viewable pictures in that folder will be displayed on the right side. Press the ► button to select a picture in a folder, and then menu again shifts to the left, with a thumbnail of the currently selected picture displayed on the right side.



Press the ► button or the “OK” button to view a larger image, or press the ▼ button to select a different picture.

As seen at the bottom of the screen, pressing the green button will toggle the list display into a thumbnail display, which shows small thumbnail pictures of the files on the left side.

To play music: To play music stored on the USB stick, press the ▼ button to select MUSIC, then press the ► button and the menu again shifts to the left. All folders and playable music files located at the root level will be listed on the left side. Press down button to navigate to a folder, and the list of folders and playable music files in that folder will be displayed on the right side.



Press the ► button to select a song name in a folder, and then menu changes to a full screen play menu and play begins. The full screen music menu displays song information and a legend at the bottom listing specific actions represented by the 4 color buttons on the remote.

Red Button: Choose different amounts of track information

Green Button: Repeat options

Yellow Button: Shuffle option

Blue Button: Stop



Press “Menu” at any time to exit the USB Media mode and return to the previous input.

If “USB Break In” is set to “NO”, or if the user has already exited the USB Media mode and wishes to return to it, it can be accessed through the menus. Press “Menu” button, navigate to MULTIMEDIA, press the ► button, and the initial USB Multimedia screen is displayed.

## **SmartCP Autosensing Side Inputs & USB Media AutoPlay Cheat Sheet**

---

### To enable SmartCP Autosensing Side Inputs:

Setup → Configuration → SmartFeatures → SmartCP  
Set SmartCP to YES/NO

### To enable USB Media AutoPlay:

Setup → Configuration → SmartFeatures → USB Break-In  
Set USB Break-In to YES/NO